



## XIOC-SER

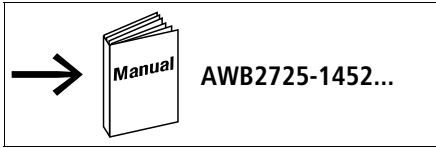

### Voraussetzung – Requirements – Configuration require – Requisiti – Requisitos

#### Hardware – Matériel Software – Logiciel

XC100 ≙ V04	BTS ≙ V3.0
XC200 ≙ V04	BTS ≙ V1.02.00
xSoft ≙ 2.3.2 / Update → www.moeller.net	

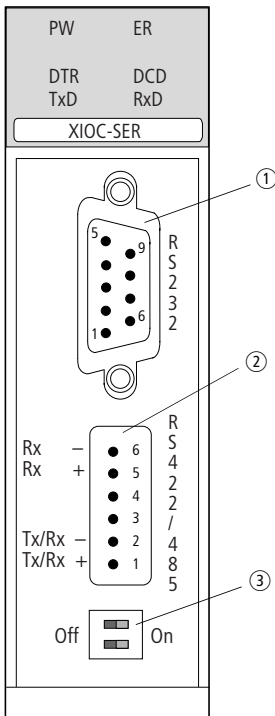

PW: Power  
ER: Error

→ Das Gerät ist für den industriellen Einsatz geeignet (→ EN 55011/22 Klasse A).  
The device is suitable for use in industrial environments (→ EN 55011/22 Class A).  
L'appareil a été conçu pour l'emploi en milieu industriel (→ EN 55011/22 classe A).  
L'apparecchio è adatto per uso in ambienti industriali (→ EN 55011/22 Classe A).  
El aparato es adecuado para uso en ambiente industrial (→ EN 55011/22 clase A).

#### ① RS 232 (SUB-D)

9	–	
8	CTS	Clear To Send
7	RTS	Request To Send
6	DSR	Data Set Ready
5	SGND	Signal Ground
4	DTR	Data Terminal Ready
3	TxD	Transmit Data
2	RxD	Receive Data
1	DCD	Data Carrier Detect

#### ② RS 422 RS 485 (COMBICON)

6	Rx–	–
5	Rx+	–
3, 4	–	–
2	Tx–	Tx–/Rx–
1	Tx+	Tx+/Rx+

③ Schalter für Busabschlusswiderstände  
Switch for the bus terminating resistors  
Interrupteur pour résistance de terminaison de bus  
Interruttore resistenza di terminazione bus  
Interruptor para resistencias del bus

