




## XT-RJ45-ETH-RS232

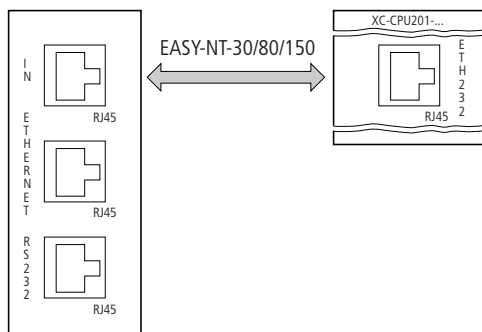


### Abmessungen – Dimensions – Dimensioni – Dimensiones

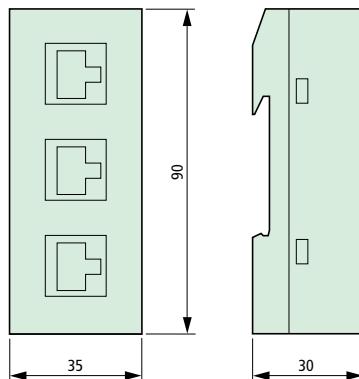

### Montage Fitting Montaggio Montaje

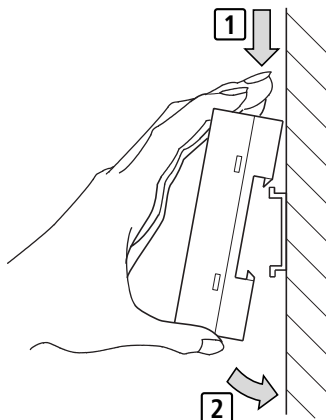


### Demontage Dismantling Démontage Smontaggio Desmontaje

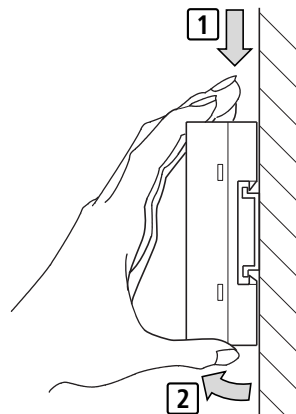

		Signal Segnale Señal	
		Ethernet	RS 232
I N	8	8	RxD
	7	7	GND
	6	6	Rx-
	5	5	TxD
	4	4	GND
	3	3	Rx+
	2	2	Tx-
	1	1	Tx+

		Signal Segnale Señal	
		Ethernet	
E T H E R N E T	8	8	-
	7	7	-
	6	6	Rx-
	5	5	-
	4	4	-
	3	3	Rx+
	2	2	Tx-
	1	1	Tx+

		Signal Segnale Señal	
		Ethernet	RS 232
R S 2 3 2	8	8	RxD
	7	7	GND
	6	6	-
	5	5	TxD
	4	4	GND
	3	3	-
	2	2	-
	1	1	-

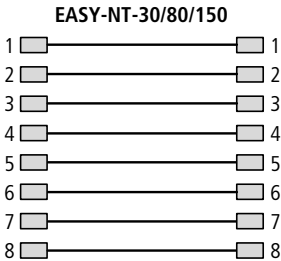

02/05 AWA2731-2257